




Cashmaster Sigma 105

Quick Start Guide

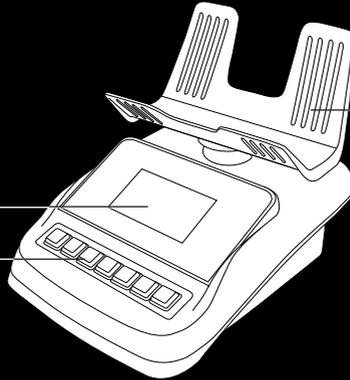

Tray

Keypad

COINS / BILLS - Used for selecting coins, bills or rolls

ON/OFF - Press to Switch machine on/off

UP and DOWN - Used to select required denominations



CLEARING / ADDING - Used for clearing values and adding to totals

FUNCTION - Used to access various functions

PRINT - Press once for a print out of the totals

Screen

Auto Scroll
Battery in use
Denomination
Coins / Bills
Selected currency
Total / Bank indicator



Auto Add
Date
Time
Scoop / No. of pieces
Sub total
Running total

Fast Key Functions

Auto add

Press and hold the 'F' key and press the 'PLUS (C/+) key. This will toggle Auto Add state. " + " will be displayed on the screen when Auto Add is on.



Auto Scroll

Press and hold the "F" key and press the "DOWN" key. This will toggle AutoScroll state. An upward arrow will be displayed on the screen when AutoScroll is on.



Switch Currency

Press and hold the "UP" and "DOWN" keys together. This will toggle between the different currencies set on your Cashmaster.



Bank On/Off

Press and hold down the 'F' key and press the 'UP' key. This will allow Bank mode to be activated or deactivated.



Bank Setting

Press and hold down the 'F' key and press the "Coins/Bills" key. This will allow you to set the Bank amount.



Calibrate Scoop

Press and hold down the "F" key and press the 'ON/OFF' key and follow the onscreen instructions.



Getting Started

1. Place the Cashmaster on a firm even surface, ensure the tray is empty, press  key.
2. Place empty scoop on scale. *If prompted to do so.*
3. You are now in count mode.

Loose Coins



Ensure that the display indicates coin counting mode.

Press either   key to select note counting mode and required the denomination.

1. Place all coins of your selected denomination in the scoop and onto the tray.
- 2a. If auto-add is on, remove the scoop from the tray, *and advance to the next denomination.*
- 2b. If auto-add is off, press the  key to add to total, remove the scoop *and advance to the next denomination.*

Rolled Coins



Press to select Rolled coins mode

Ensure that the display indicates Rolled Coins counting mode.

Press the coins/bill  key to select Rolled Coins counting mode.

1. Place a roll of coins on the tray.
 - 2a. If the roll is "full" the Cashmaster will display the value. *Go to step 3*
 - 2b. If there is "crossover" or the roll is not "full". You must then select the denomination of coin using the  . Press the  key to confirm. *Go to step 3.*
 - 3a. If auto-add is on and the roll is "full" the cashmaster will automatically add to total.
 - 3b. If auto-add is on, and the roll is not full, press  key to accept and add total.
 - 3c. If auto-add is off, press the  key to accept the value and add the grand total. *Advance to the next denomination.*

Loose Bills



Ensure that the display indicates bill counting mode.

Press either   key to select note counting mode and required the denomination.

1. Place bills of the selected denomination on the tray (up to 30 at one time). Repeat until all bills in denomination are on the tray.
- 2a. If auto-add is on, remove bills from the tray.
- 2b. If auto-add is off, press  key to add to total, remove the bills and advance to the next denomination.

Advance to the next denomination.

 Customer Support (Toll Free): 1 - 877 - CASHMAS

www.cashmaster.com